



Akuvox SP-R5X Software Upgrading Manual

05/06/2015

Content

- Instruction.....2***
- Webpage upgrade..... 2***
 - Configuration on phone..... 2
- Auto provision upgrade..... 4***
 - Configuration on AutoP file..... 4

Instruction


R5X series allows user to upload firmware to phone via phone webpage or Auto provision. To implement Auto provision upgrade, user need to have pre-configured firmware server with corresponding firmware. The server type includes ftp/tftp/http/https, and the suffix of the file name must be xxxxx.rom

There are many possibilities for unexpected condition when upgrade the software. In case any disaster, Akuvox phone provides resume mode to ensure upgrade success.

Webpage upgrade

Configuration on phone

1. Go to path: Upgrade→Basic

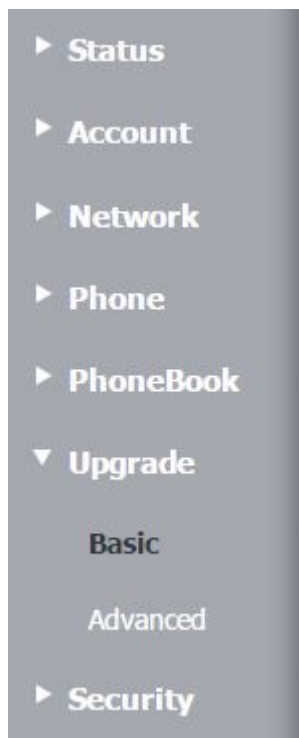

2. In the Upgrade-Basic page, click select file from Upgrade column to choose corresponding firmware.

Upgrade-Basic

Firmware Version	59.138.4.105
Hardware Version	59.0.3.0.16.0.0.0
Upgrade	<div><div>选择文件</div><div>未选择任何文件</div><div>Submit</div><div>Cancel</div></div>
Reset To Factory Setting	<div>Submit</div>
Reboot	<div>Submit</div>

3. Click Submit, the phone will enter upgrade mode automatically.

Auto provision upgrade

Configuration on AutoP file

1. Input firmware URL after Config.Firmware.Url, E.g. A tftp server below.


Config.Firmware.Url = tftp://192.168.1.7/52.0.3.41.rom


2. Go to path: Upgrade→Advanced, upload the configuration file to the phone via AutoP method.

Upgrade-Advanced	Help
<div>PNP Option</div> <div>PNP Config Enabled ▼</div>	Note : Max length of characters for input box: 255: Broadsoft Phonebook server address 127: Remote Phonebook URL & AUTOP Manual Update Server URL 63: The rest of input boxes
<div>DHCP Option</div> <div>Custom Option <input type="text"/> (128~254) (DHCP Option 66/43 is Enabled by Default)</div>	Warning :
<div>Manual Update Server</div> <div>URL <input type="text" value="tftp://192.168.1.7/r0000000000052.cfg"/> User Name <input type="text"/> Password <input type="text"/> Common AES Key <input type="text"/> AES Key(MAC) <input type="text"/></div>	Field Description :
<div>AutoP</div> <div>Mode Power On ▼ Schedule Sunday ▼ <input type="text" value="22"/> Hour(0~23) AutoP Immediately AutoProvision Clear MD5 Submit Export Autop Template Export</div>	Submit Shortcut Submit Cancel
<div>Submit Cancel</div>	

Resume software upgrade.

Akuvox Phone resume mode

1. Unplug power supply
2. Press and hold Home key 
3. Re-plug power supply
4. Under resume mode, press "Edit" to edit IP, Mask, Gateway, and Tftp. Make sure your IP and tftp server are in the same network segment.

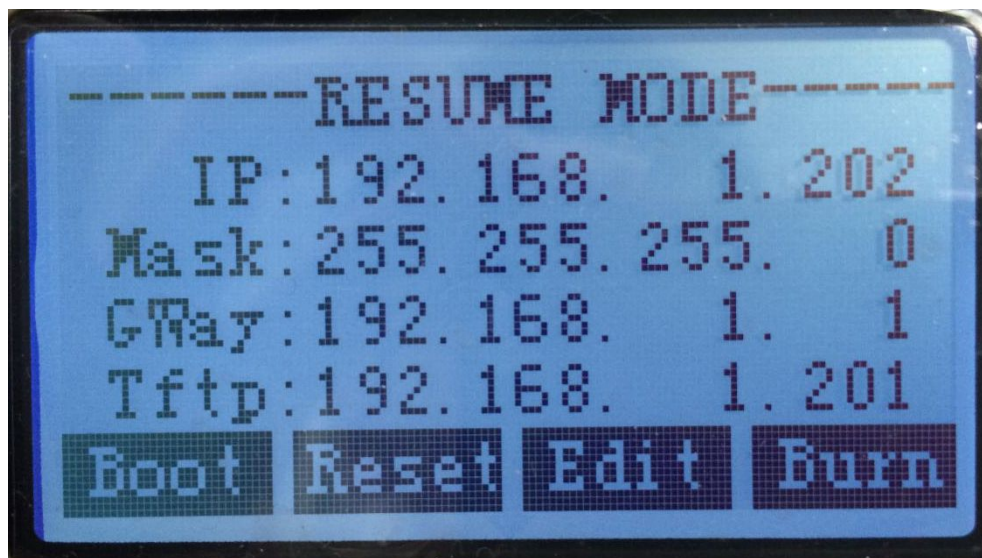

*Place firmware in tftp server, and rename it to R5X.rom. E.g. R50.rom

5. Press "Burn" key to bring you back to software upgrade.